


The room thermostat should only be installed by a specialist. In doing so the current safety regulations stipulated by the VDE (Association of German Electrical Engineers) and the local power supply companies are to be taken into account.

Before starting work disconnect the power supply and remove the mains plug!


Installing the room thermostat



Remove the rotary knob from your room thermostat.

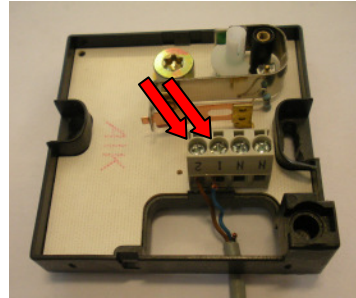

Now connect the 2-pin cable to positions 1 and 2 of the terminal block.

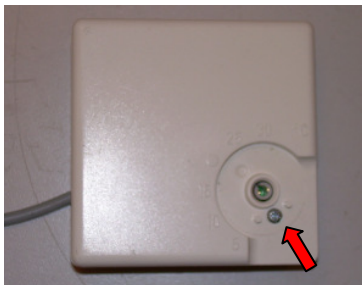

Loosen the cross-head screw to enable the cover of the thermostat to be removed.



Remove the cable bridge from the stove's interface and connect the cable of the room thermostat in its place.

Thermostat operation

1. Set your desired heat output on the stove's control panel.
2. Specify your desired temperature on the room thermostat.
3. After reaching the desired ambient temperature your pellet stove heats up for 5 minutes with the set heat output and then switches off - "Standby" appears in the display. If the room temperature falls below the set value, the stove will switch back on again automatically.

Important: If the stove is shut down manually (e.g. before reaching the room temperature), "heat off" will appear in the display (refer to the stove operating manual for more information). The stove is thereby deactivated and the room thermostat function is inactive! The heating procedure can only be resumed by pressing the ON/OFF button.

Note: Automatic operation with the room thermostat particularly requires consistent adherence to the cleaning intervals specified in the operating manual.

Further information regarding commissioning can be inferred from the manufacturer's operating manual.